




# Etekcity Lasergrip 1080 Trigger Replacement

This guide is for a trigger that will not work.

Written By: Patrick Crawford

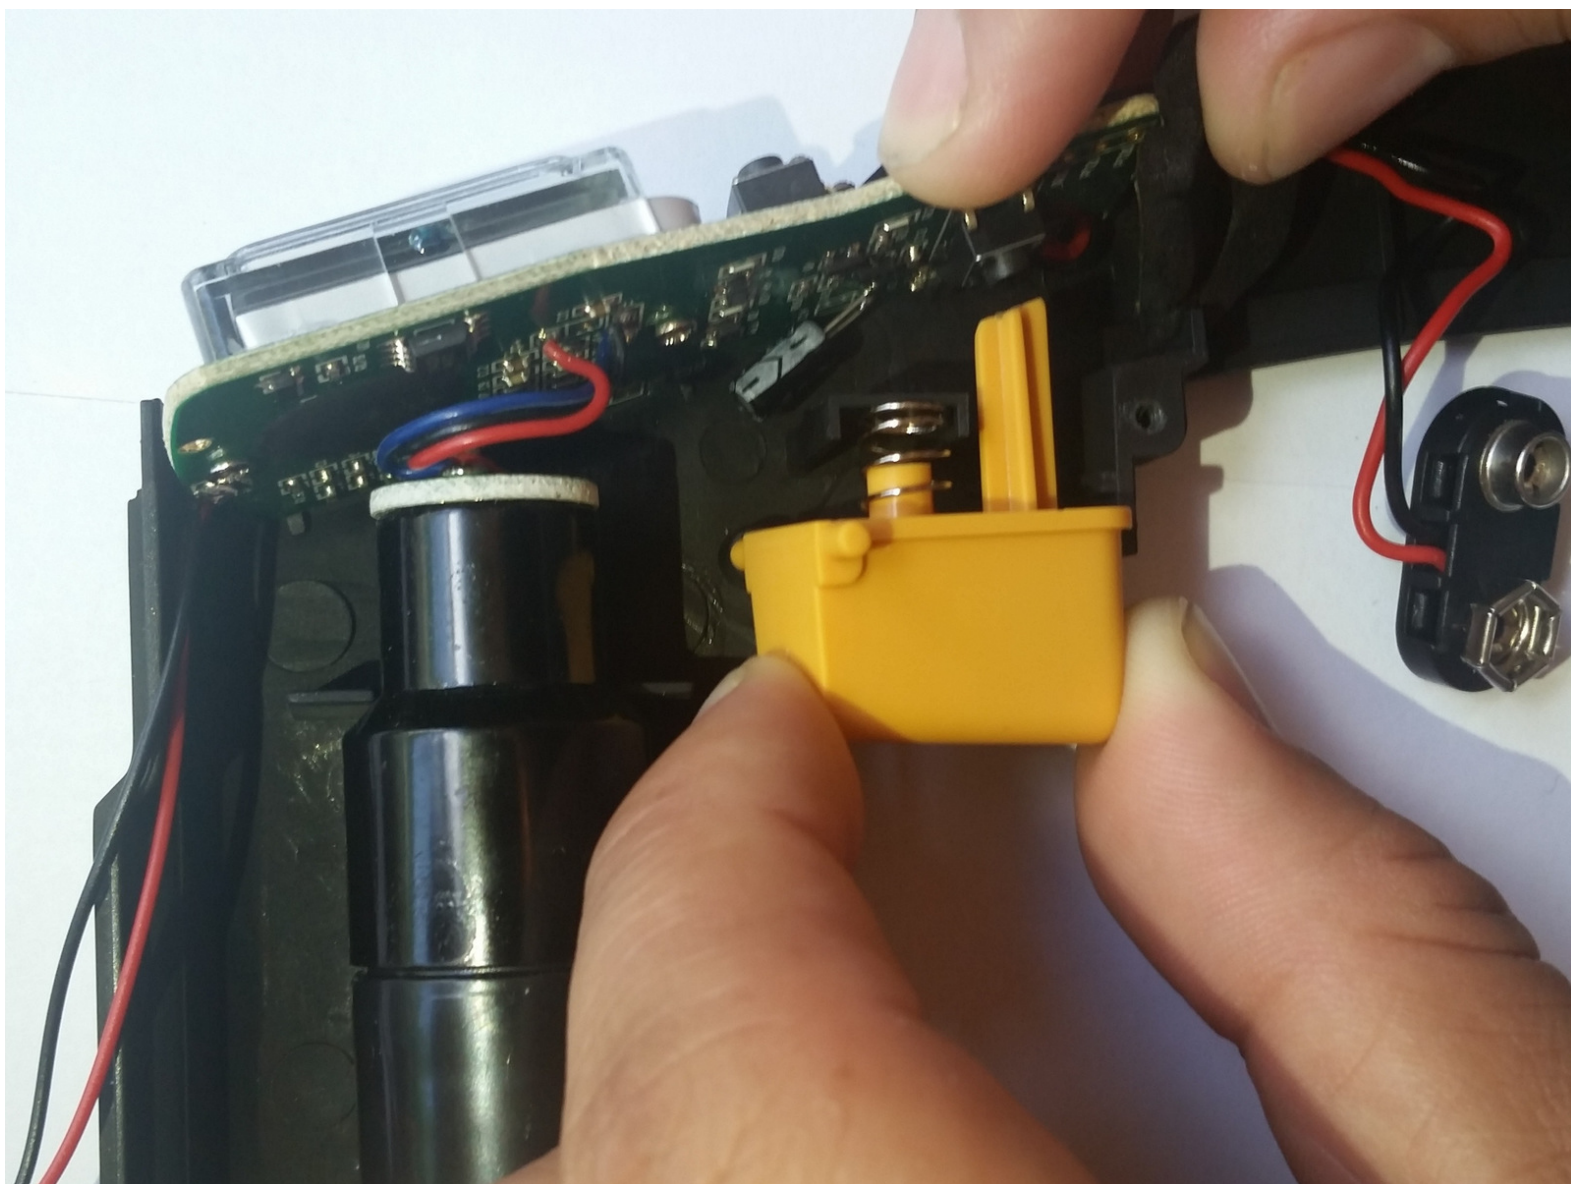

## INTRODUCTION

This guide will show you how to repair a trigger that has a faulty connection. If the trigger will depress and not return to its original position or if it will not even depress, this will be necessary. The tool needed is a screwdriver. There are no hazards in this guide.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Pull the lid away from the handle.

**i** The battery needed is a 9V.

## Step 2



- Gently pull the battery out of the handle.

**!** Be careful with the wires as they are easily breakable.

## Step 3



- Disconnect the battery by pulling the connector away from it.

- Positive first
- Negative second

⚠ When replacing the battery, this order is reversed. Follow these steps to avoid being shocked.



## Step 4 — Buttons



- Gently pull the handle cover off of the device.

⚠ Pull straight down so that it does not break.

## Step 5



- Use the plastic opening tool to remove the two yellow covers from the device.

⚠ When pulling off the back cover, be careful to not lose the buttons as they are not connected to it but they just sit there.


ℹ This will take a lot of force, so don't hesitate to use some strength.

## Step 6



- Remove the two 3.1 mm Phillips #0 screws.


## Step 7

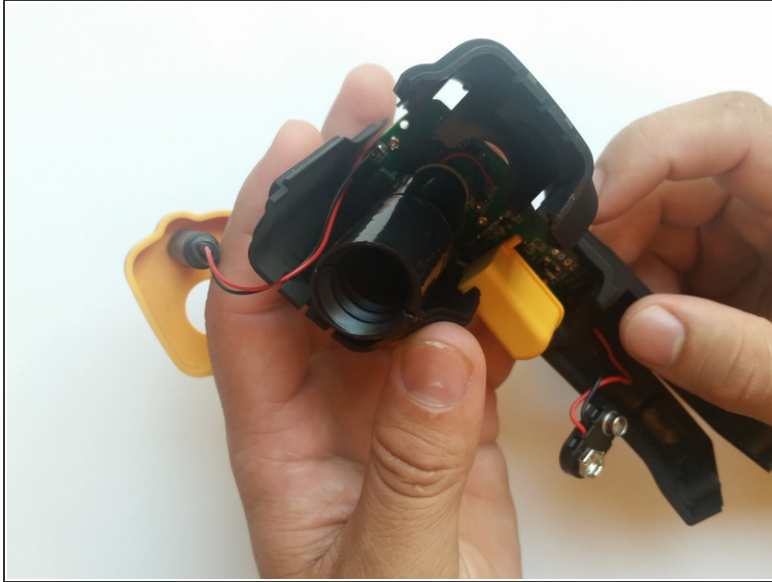

- Pull the two halves apart.

⚠ The components are loose on the inside so be careful not to lose any.



## Step 8

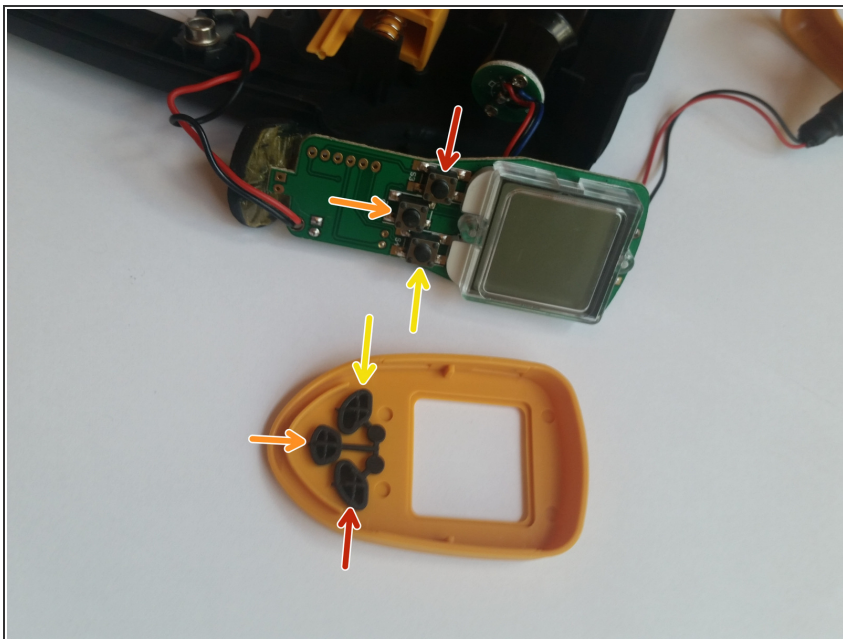

- Realign the buttons with the button terminals.
- ⓘ Red terminal to red button, orange terminal to orange button, yellow terminal to yellow button.



## Step 9 — Etekcity Lasergrip 1080 Trigger Replacement

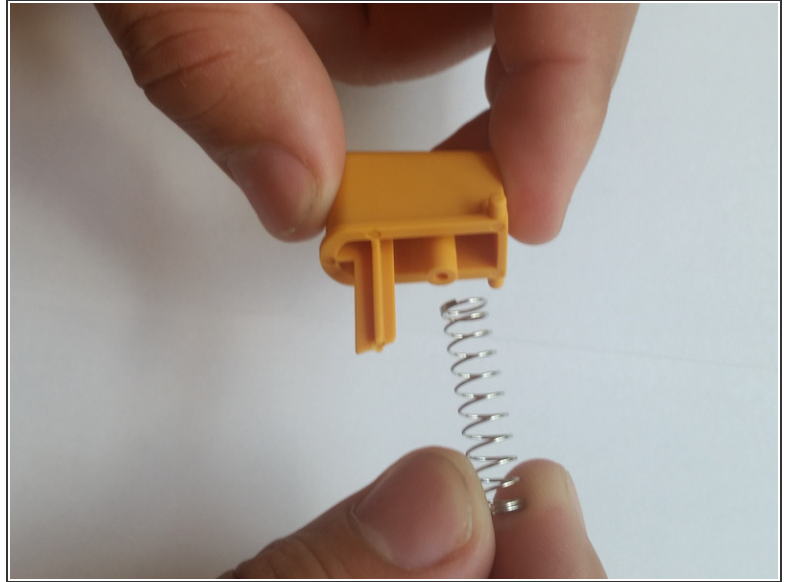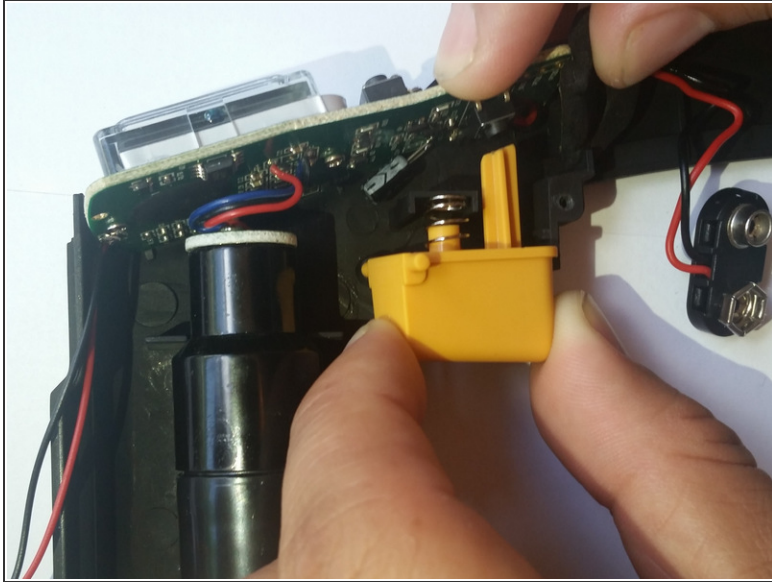

- Carefully pull the trigger out.

- ⚠ The trigger is spring loaded, so be careful that you do not lose the spring as you pull the trigger out.
- ℹ To put the trigger back in, align the peg with the hole in the handle and align the shaft with the button terminal.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 12:00:04 AM.